


S-A-A-2 Menu Map (Firmware-20200501)

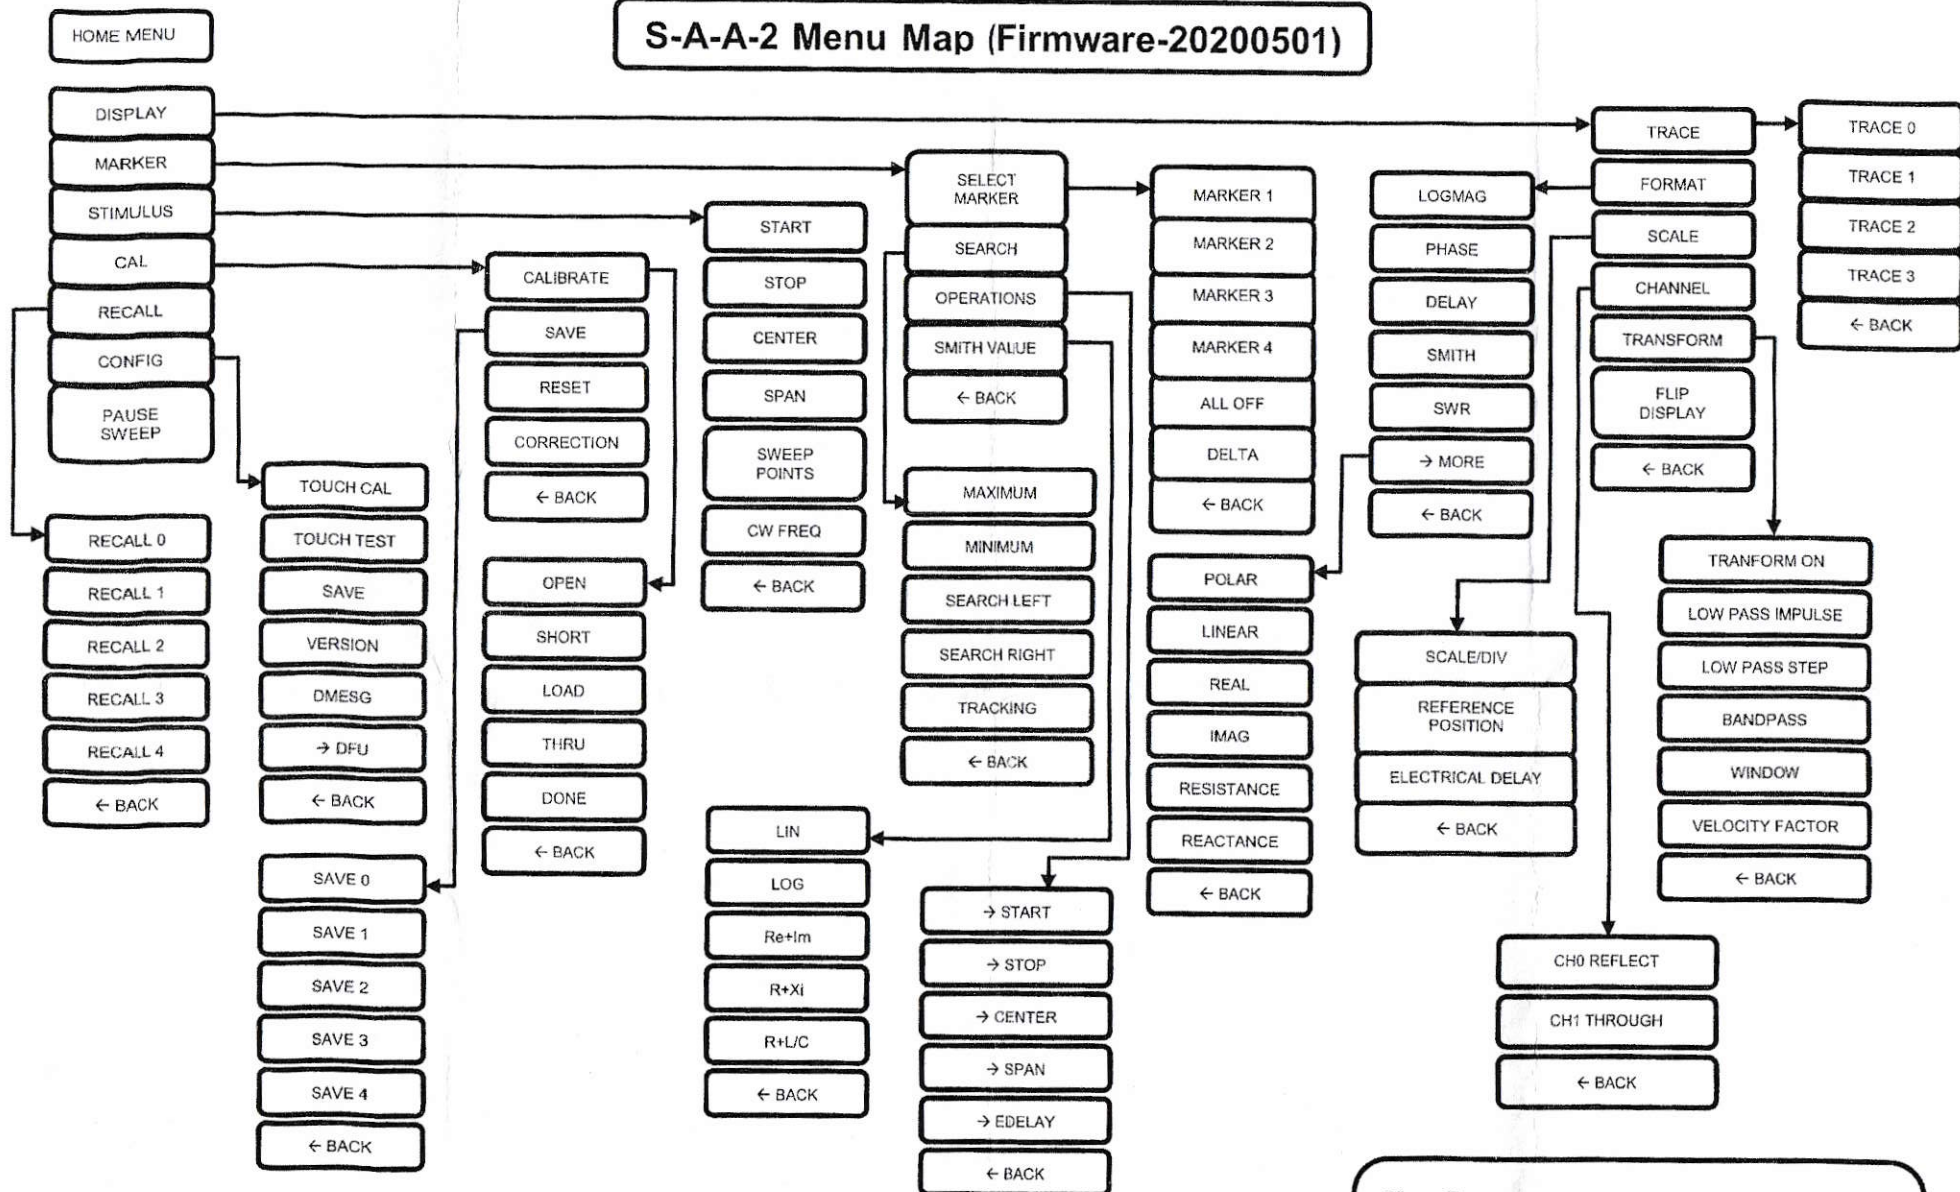

The S-A-A-2 always powers up in an un-calibrated state. Any calibration stored in C0-C4 has to be manually recalled.

NanoVNA-V2-firmware download: <https://github.com/nanovna/NanoVNA-V2-firmware/releases>

VNA-QT software download: <https://github.com/nanovna/NanoVNA-QT/releases>

User guide: <https://github.com/nanovna/NanoVNA-QT/blob/master/ug1101.pdf>

User Groups:

<https://groups.io/g/NanoVNA-V2>

<https://groups.io/g/nanovna-users>

hwalker 05112020